


STEP 7: Seal Penetrations—Square Penetrations With Block Out

All penetrations must be sealed with the Barrier-Bac Composite Vapor Barrier and Seam Tape. For square posts, please seal penetrations with Block Out Seaming Methods.


1

Cut a piece of Barrier-Bac Composite Vapor Barrier twice the height and one and one-half the length of the perimeter of the Block Out. Wrap membrane around Block Out and temporarily tape vertical seam.

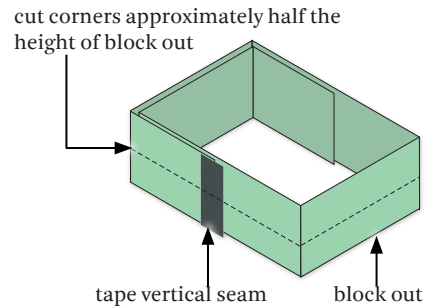

2

Make cuts in each of the four corners approximately half the height of the Block Out. Remove formed Block Out membrane form, flip over and replace on Block Out spreading flaps to horizontal position. Tape all flaps securely with Barrier-Bac Seam Tape.

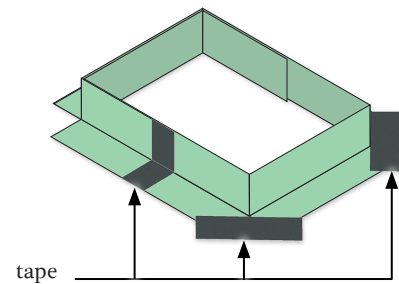


STEP 8: Patch Damages

All damages to the film must be sealed prior to pouring. Patch all damaged areas with Barrier-Bac Composite Vapor Barrier and Seam Tape.

1

Cut a piece of Barrier-Bac Composite Vapor Retarder in a square large enough so sides of patch extend eight inches from side of puncture.

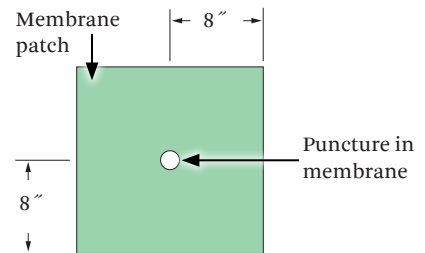

2

Cover damaged portion with membrane patch and secure all patch seams with Barrier-Bac Seam Tape.

