




INSTALLATION GUIDELINES

Vapor Barrier Products

STEP 2: Unroll, Overlap And Tape The Seam

Seams and/or joints can be joined using either Barrier-Bac Seam Tape or with heat welding. The film should be overlapped six inches side-to-side and end-to-end.

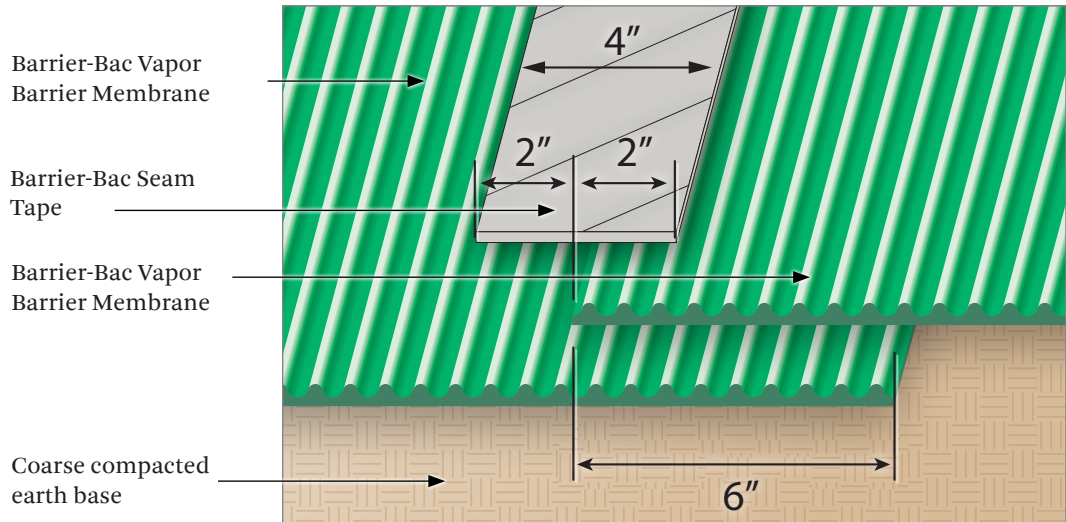

STEP 3: Pour The Concrete

Inspect all seams, penetration and damaged areas and make sure they are well sealed or patched. (See **Step 7 & 8: Seal Penetrations** and **Step 9: Patch Damage**) After seal all penetrations and patch all damaged areas, pour the concrete on top of Barrier-Bac Vapor Barrier

